

BHT Initialisation & Programming

This manual provides a step-by-step guide to upgrade existing units.

IMPORTANT

This manual covers Denso OS devices BHT-8000, BHT-300. The set-up and programming of all these devices is similar across these ranges with one major exception. The BHT-8000 application has a **.PD3** file extension and can be loaded using the BHT-Protocol. All the others have a **.PD4** file extension, which uses the YMODEM protocol to load application.

It is important that once the new application has been loaded that the protocol is switched back to BHT-Protocol in order for the day-to-day standard data transfer to work.

To upgrade the software there are 3 areas to consider and all must be configured the same in order for the upgrade to work.

- a) PC/Host software. This is used to transmit the application to the BHT.
- b) Comms Hardware. This is either a cradle or cable connected via USB or Serial (RS232)
- c) BHT. The device itself to receive the application.

Quick Guide Check List

Ensure the following have been set as per the instructions below.

- 1) PC Com port identified
- 2) If using a cradle, comms speed identified from DIP switches
- 3) New program saved to PC (in an appropriate folder)
- 4) Program Loader configured correctly
 - a. Path to the new program
 - b. Port number
 - c. Speed to suit cradle (if used)
- 5) BHT Configured
 - a. For Cradle - Optical set Transfer Speed to match Winartu3/Cradle speed
 - b. For Cable - Connector set Transfer Speed to match Winartu3 speed
 - c. Port - Set to Optical for cradle OR Connector for Cable
 - d. Protocol - BHT8000 BHT Protocol, BHT300 YMODEM Protocol
- 6) Load Program, once loaded set as Default (Execute Program)
- 7) Activate License. Contact 01753 778899 to get license code

BHT System Menu Structure

The following menu structure shows the key menu options in the BHT SYSTEM MENU

Press and hold down the **SF** and **1** keys + **PW** to enter the SYSTEM MENU.

SYSTEM MENU

2: DOWNLOAD

1: FILE - Load Program from PC

4: SET SYSTEM

1:EXECUTE PROGRAM - Set the default Boot program

3:DATE/TIME - Set system date/time

5:COMMUNICATION

1:OPTICAL - Settings for cradle connection

2:CONNECTOR - Settings for IFC cable connection

3:COM PORT - Set the default port (Optical to Connector)

4:PROTOCOL TYPE - Set the Protocol

7:RESUME - Set Resume function on/off

8: RF (Only on some units)

1:PARAMETER

1:RF NETWORK

1:NETWORK PARAMETER - Set Radio SSID

2:RF OPTION - RF Options

2:SECURITY

1:SECURITY MODE - Set Security Mode

2:CONFIGURATION - Set Security Configuration

3:INITIALIZE - Reset RF parameters

2:SITE SURVEY - Site Survey to check the RF Connection

3:VERSION - RF Version & MAC

Section 1. Identify the Comms Hardware

Before loading the BHT with new software or to resolve comms problems first identify the hardware used.

CRADLE or CABLE

Is the BHT connected to the PC/Host using a cradle or direct connect IFC cable? If using a cradle then you will need to make sure the **Optical** Settings in the BHT are correct and the baud rate (speed) is set see below. For Cable connection the **Connector** Settings are used.


COMM PORT

The cradle or IFC cable will be connected to the PC/Host using an RS232 or USB connection.


RS232 connection, check what port the cable is connected to on the back on the PC case, or if there is only one then it will be COM1.



RS232 to USB Connection. If using a third party RS232 to USB adaptor then check the virtual com port number in the system properties. To find this from the **Control Panel**, select **System** then select the **Hardware** tab then **Device Manager**. (For Windows 7 Select **Device Manager** from the **Control Panel**)

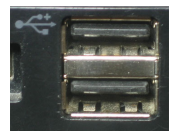


In the **Ports (COM & LPT)** section the port number will be listed (Com 1 in this example).

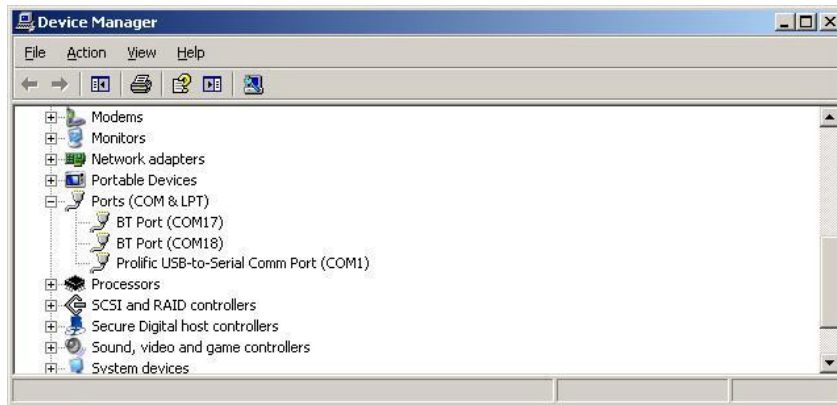


USB Active Port Connection. If using a USB cradle then check the virtual com port number in the system properties. To find this from the **Control Panel**, select **System** then select the **Hardware** tab then **Device Manager**. (For Windows 7 Select **Device Manager** from the **Control Panel**)

In the **Ports (COM & LPT)** section the port number will be listed (Com 8 in this example).

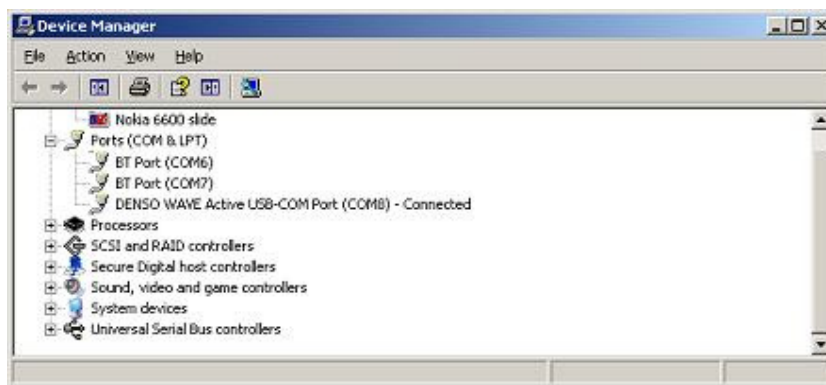

RS232 CRADLE SPEED

If using a cradle then identify the comms speed, or for a new install check that the comms speed is set to the application requirements (in most instances this should be 115,200)

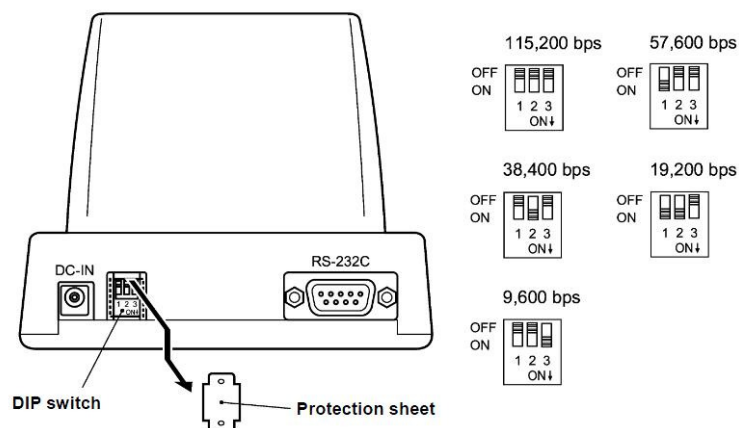


Section 2. BHT Program Loading

PREPARE THE UNIT FOR PROGRAMING



- 1) Press and hold down the **SF** and **1** keys + **PW** to enter the SYSTEM MENU.

Note, this screen may be slightly different depending on the model.

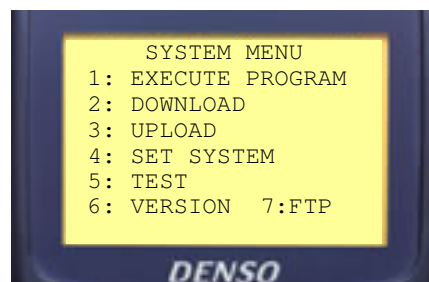

COMMUNICATIONS



- 2) From the system menu press **4 ENT** for the SET SYSTEM menu then **5 ENT** to display the COMMUNICATION MENU.

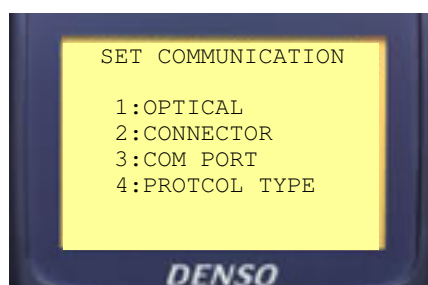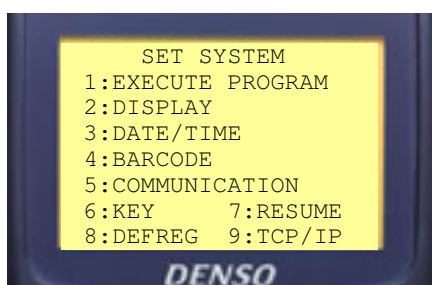

CONNECTION

Press **3 ENT** for the SET COM menu. Now check that the default port is as required; for cradle set to **Optical** and for IFC Cable set to **Connector**.

To change these use the cursor keys (typically **F5** to **F8**) and set both options to match the comms hardware used.

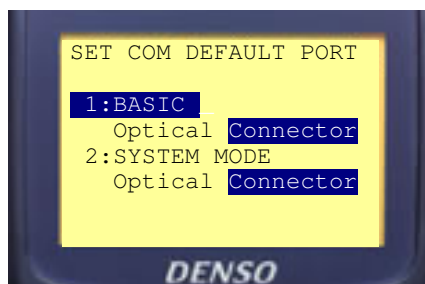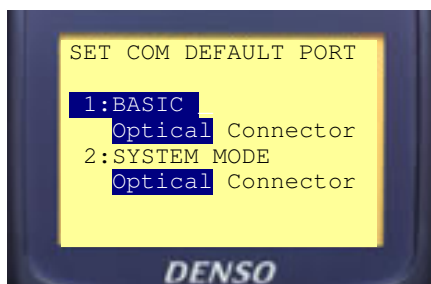


Then press **ENT** to return to the COMMUNICATION MENU.


PROTOCOL

From the COMMUNICATION MENU press **4 ENT** to display the PROTOCOL TYPE menu. Check that this is correct; for BHT8000 this should be **BHT PROTOCOL** and all others BHTs should be **Ymodem**. If this requires changes..

On **BHT8000** press **1 ENT** to set **BHT PROTOCOL**, then press **C C** to return to the SYSTEM MENU.

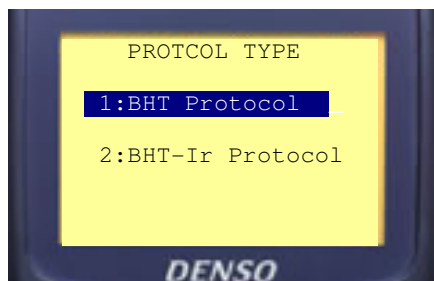

For **BHT300** press **1 ENT** to set **Ymodem**, then press **C C C** to return to the SYSTEM MENU

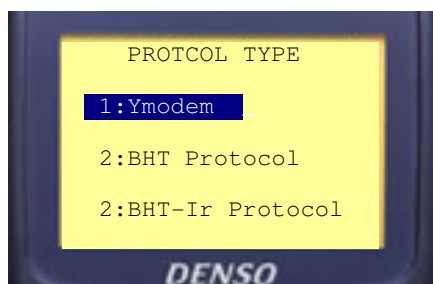



Important Once the new program has been loaded, the protocol on the BHT300 must be set back to **BHT PROTOCOL** in order for the day to day data transfers to work correctly.

SPEED

From the Communication Menu press **1 ENT** for **Optical** (Cradle) OR **2 ENT** for **Connector** (Cable).

Now press **1 ENT** for the **Parameters** and check the speed is correct.

Using the cursor keys (typically **F5** to **F8**) set the **Transmit Speed** to the required options. Then press **C C** to return to the communication menu.

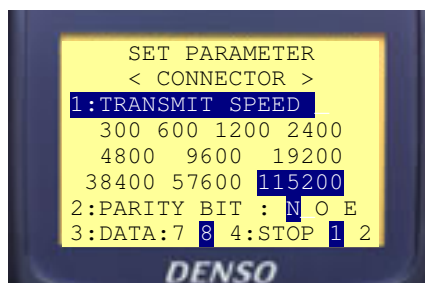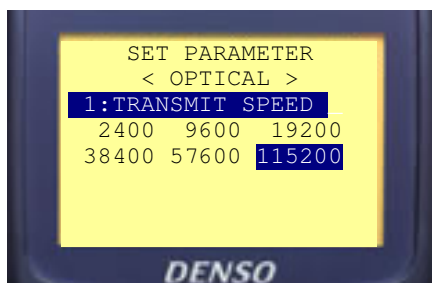

Section 3. Setup the PC to send the program

Save new Application

Before configuring the application to send the program you must first save the new BHT program file (MyProg.pd3 or MyProg.PD4) to a folder on the PC. e.g. "C:\BHTPROG\"

Note, the communications utilities do not accept folder names that are longer than 8 chars or have spaces in them. E.g. "My Desktop" or "NewBHTprogramFile" are not acceptable.

Program Loader Install

If the Program Loader has not been installed before then extract the files from the installation package run the setup.exe program, then follow the on screen prompts.

Get Program Loader from..


<http://www.autoidfirst.co.uk/downloads/programloader.zip>

Once installed, run the Program Loader.

Select the options required. The parity, Data Bits, Stop Bits, Timeout, BCC and Seq Nos should all be left as defaults unless specifically instructed otherwise.


Press the Program File button and select the program required.

Once the BHT is ready to receive the program press the send button.


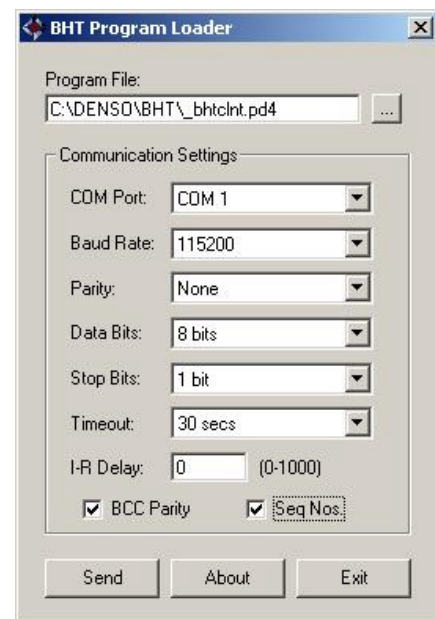


Section 4. Loading the program

- 1) Once the PC is ready to send the program enter the system menu (press **SF** and **1** keys + **PW**) then press **2 ENT** for the Download Menu then **1 ENT**.

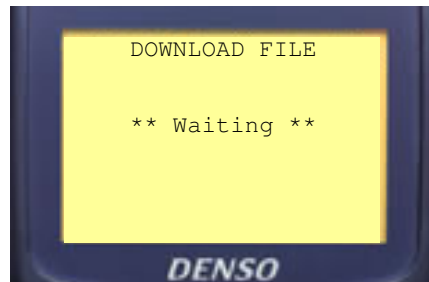



- 2) Transfer the new program (PD3 or PD4) file from the PC by running the Winartu3 shortcut (or selecting send on the Program Loader). The display will show the transfer progress and BEEP twice when completed. Now press **C C** to return to the SYSTEM MENU.

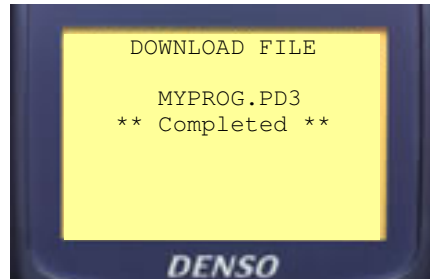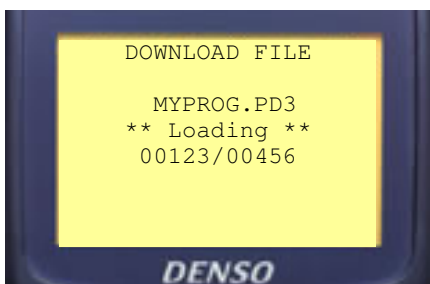

- 3) Once the program has been transferred you will need to activate it. Please refer to section 5 (below)

Section 5. Activate the program



- 1) From the system menu press **4 ENT** for the SET SYSTEM menu then **1 ENT** to display the SET EXECUTE PROGRAM menu.

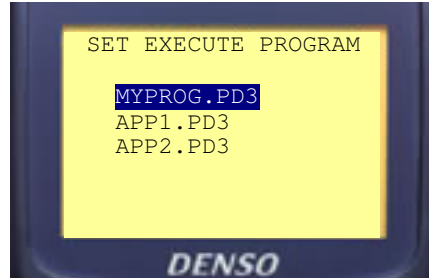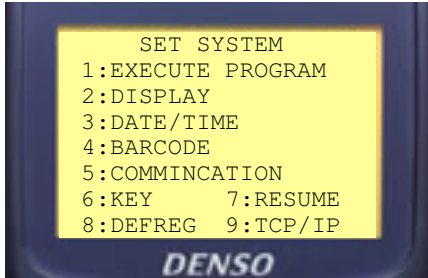

Ensure the loaded program is highlighted then press **ENT** now switch the unit off press **PW**.

Password

- 2) When the program is run for the first time it will prompt for a password.

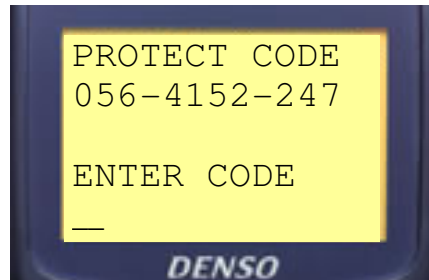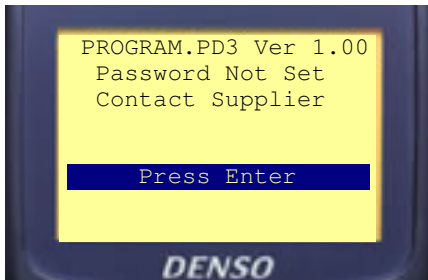



Contact the BancTec ServiceFirst call centre on 01753 778899. Enter the passcode provided to activate the program

Section 6. Other Settings

Depending on the application it may be important that the Resume function and Date/Time is set correctly.

RESUME

From the system menu press **4 ENT** for the SET SYSTEM menu then **7 ENT** to display the SET RESUME menu.

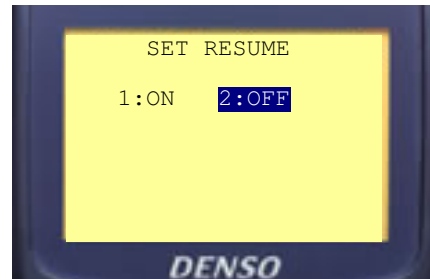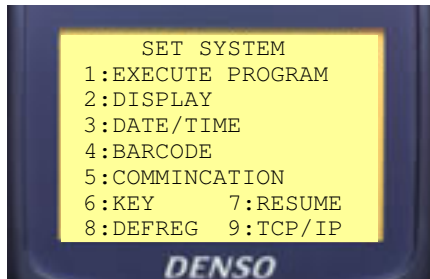

Now press **2 ENT** to set resume off, then press **C** to return to the SYSTEM MENU

DATE/TIME

From the system menu press **4 ENT** for the SET SYSTEM menu then **3 ENT** to display the SET DATE/TIME menu. Enter this as YY/MM/DD HH:SS using the keypad then press ENT. Note to delete incorrect entries use BS key.

